

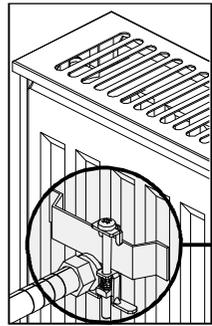


## Montageanleitung


### Aushebe- / Verschiebesicherung für RHE-Bohrkonsole

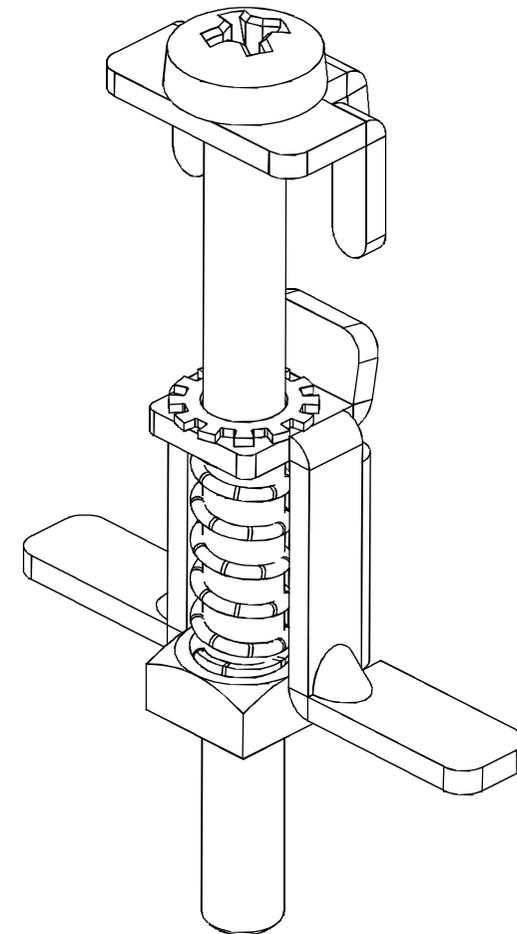


2.4.

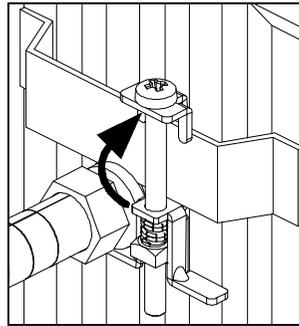


2.5.

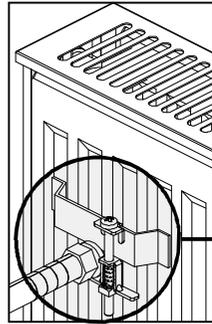


2.6.

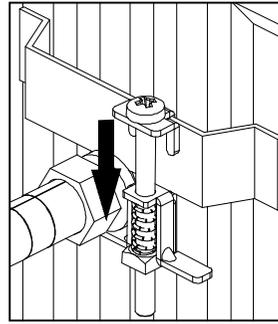


2.7.

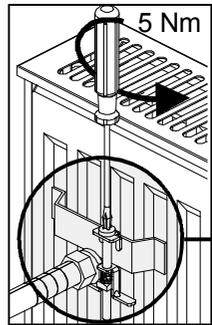


2.8.

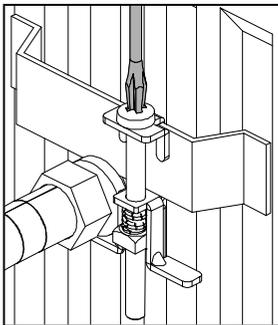


2.9.

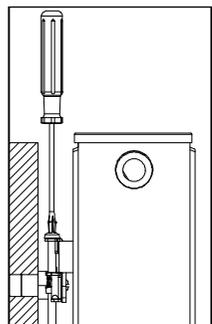


2.10.

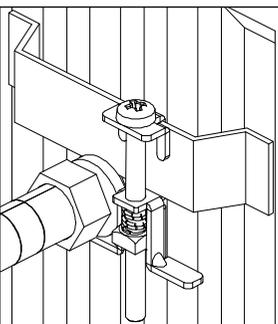


2.11.

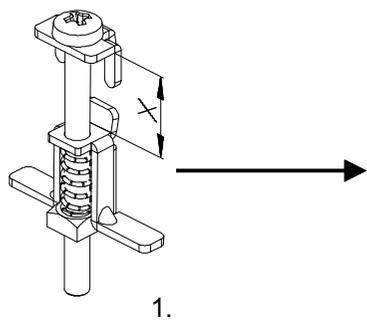


1.

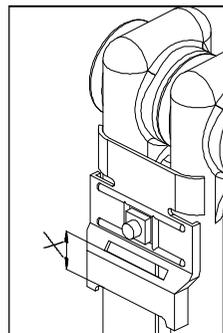


1.1.

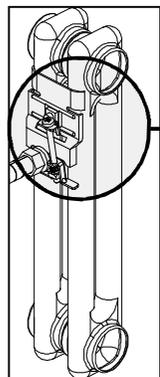


1.2.

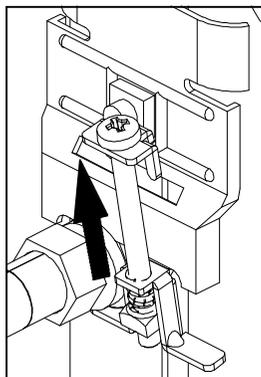


1.3.

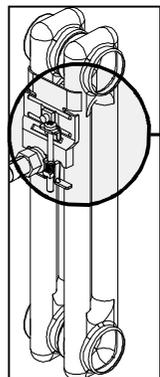


1.4.

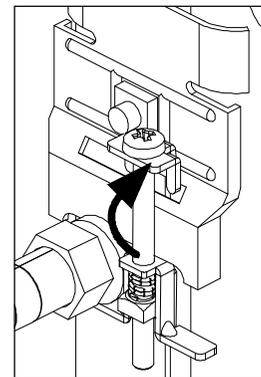


1.5.

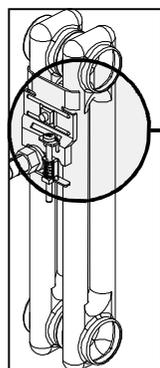


1.6.

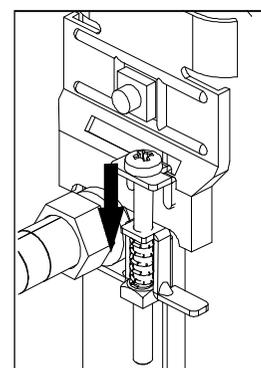


1.7.

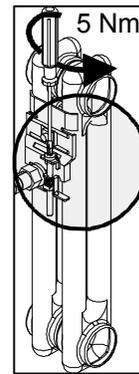


1.8.

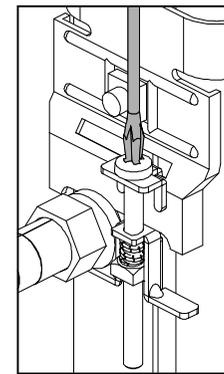


1.9.

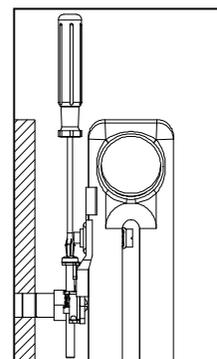


1.10.

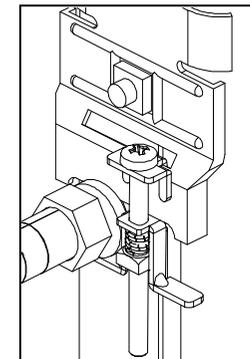


1.11.

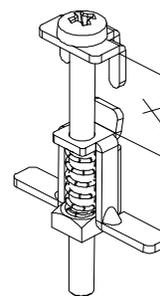


2.

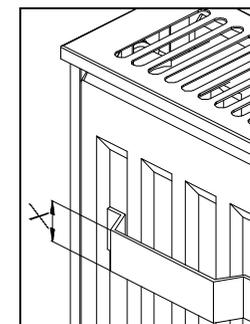

2.1.

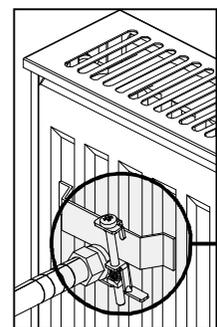

2.2.

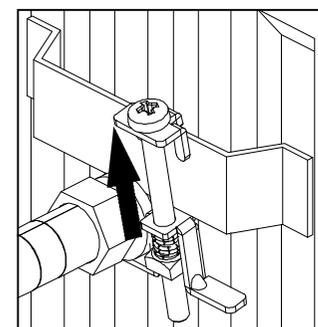

2.3.